

# HIWATT

## Welcome to Hiwatt.

Proudly producing generations of Iconic British Tone for the World's best artists. Legendary headroom, clean and clear sounds, great for pedals and studio work, unbeatable live onstage.



### AMPLIFIER FEATURES\*

- Hiwatt's Classic Solid State Bass Amplifier with Historic Analog Preamp.
- Hiwatt's original Hi-Headroom. Stage-ready, durable, road-tested performance.
- Class D output section for maximum efficiency and plenty of clean Hiwatt power.
- 4-band parametric EQ
- Built in limiter with on/off toggle.
- A variety of output options for versatility in the studio and on the stage.
- An auxiliary in, great for small gigs and practice.





## IMPORTANT SAFETY INSTRUCTIONS



### Please read these instructions carefully before switching your amplifier on.

- Please ensure that the voltage selector/ indicator and fuses match the supply voltage of the country in which the amplifier is being used.
- Do not switch the amplifier on without the loudspeaker connected. It is important that the amplifier and speaker are matched at the correct impedance. Failure to do so can result in damage to the amplifier or speaker.
- Never attempt to by-pass fuses or fit ones of incorrect value.
- Never use an amplifier in wet or damp conditions.
- Protect the power cord from being walked on or pinched. Do not modify.
- All servicing should be carried out by a professionally qualified service technician.
- Always ensure free movement of air around the amplifier to prevent overheating.
- Do not attempt to remove the amplifier chassis, there are no user serviceable parts inside.
- Always use the supplied mains lead provided with your amplifier. If a replacement is needed, please contact your Hiwatt Dealer.
- Always unplug this amplifier during lightning storms or when unused for prolonged periods of time.

**WARNING – if used improperly or without proper safeguards this equipment can cause hearing damage or loss of hearing.**

**Servicing is required** when the apparatus has been damaged in any way, such as when the power supply or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.



**Hiwatt.co.uk/downloads**  
IMPORTANT SAFETY INSTRUCTIONS  
IMPORTANTI ISTRUZIONI DI SICUREZZA  
CONSIGNES DE SÉCURITÉ IMPORTANTES

**Follow all instructions and warnings**

Please keep instructions in a safe place

Register product online: **Hiwatt.co.uk**

## PROCEED WITH CAUTION - EXTREME POWER ON TAP

Hiwatt's Class D Hybrid Bulldog bass amps have plenty of extra bite and are capable of operating at **extreme volume levels**.

Hiwatt has balanced and rated the Bulldog 300 at 8 ohms, which we consider to be the 'sweet spot' for Class D bass amplification.

Due to the linear nature of Class D, running these amplifiers into a 4 ohm load will result in double the volume and power output from the amplifier. It is important to always ensure that your cabinet is sufficiently rated to handle the power of this amplifier as even a small change in playing style or gain staging can result in a large increase of power output into the speakers.

Speakers are typically tested at 2/3 of their wattage rating and are designed to perform best between 2/3 to 3/4 of their rated power. With this in mind, we recommend a minimum wattage for each amp on Page 5 of this user manual.



@HiwattOfficial

## FRONT PANEL FEATURES



**Input** - Plug your guitar in here with a 1/4" instrument cable. P

**Gain** - This controls the level of Gain applied to the input.

**Bass** - Adjusts the level of low frequencies.

**Low Mid** - Adjusts the level of lower middle frequencies.

**High Mid** - Adjusts the level of higher middle frequencies.

**Treble** - Adjusts the level of high frequencies.

**Volume** - Controls the overall volume level of the amplifier.

 
**Limiters** - This switch toggles the limiter function on and off.

**Aux** - Plug in an external audio device here with a 3.5mm jack.

**Headphone Out** - Plug in headphones with a 3.5mm jack for quiet practice sessions.

**Power** - Turns the amplifier's power on and off.

## REAR PANEL FEATURES

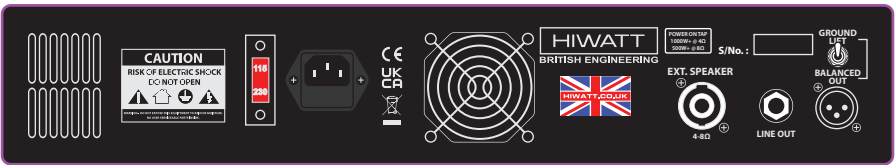

**Voltage Selector** - For setting the amp's voltage based on the correct voltage for your country.

**Mains Input** - Connect with correct power cable.

**Speaker Output** - Connect a speaker cabinet using a Speakon cable or a 1/4" speaker cable.

**Line Output** - Connects to a unit with a line level input.


**Balanced Out** - Male XLR output, perfect for direct recording or live performances.

**Ground Lift** - This switch lifts the ground of the Balanced Out to cancel out potential ground hum.

## TURNING ON YOUR AMPLIFIER

 
- Please check that the voltage of your amplifier is set to the correct voltage for your country.
- Ensure that the impedance of your amplifier and speaker cabinet are matched. (4 ohm minimum speaker load).
- Ensure that your amplifier is plugged into your speaker cabinet.
- Set MASTER and GAIN to zero.
- Set BASS and TREBLE knobs to 12 o'clock.
- Plug your instrument into the INPUT of your amplifier using a 1/4" instrument cable.
- Turn the amplifier on. Set GAIN so that the LIMIT LED engages on loud notes and then set the MASTER to the desired volume for your playing environment.
- Boost or cut BASS, TREBLE and the faders of the GRAPHIC EQUALIZER to adjust your sound and toggle LIMIT on or off for desired dynamics. There may be a jump in volume when disengaging the LIMIT function.

# STUDIO AND FRONT OF HOUSE OUTPUT CONFIGURATIONS

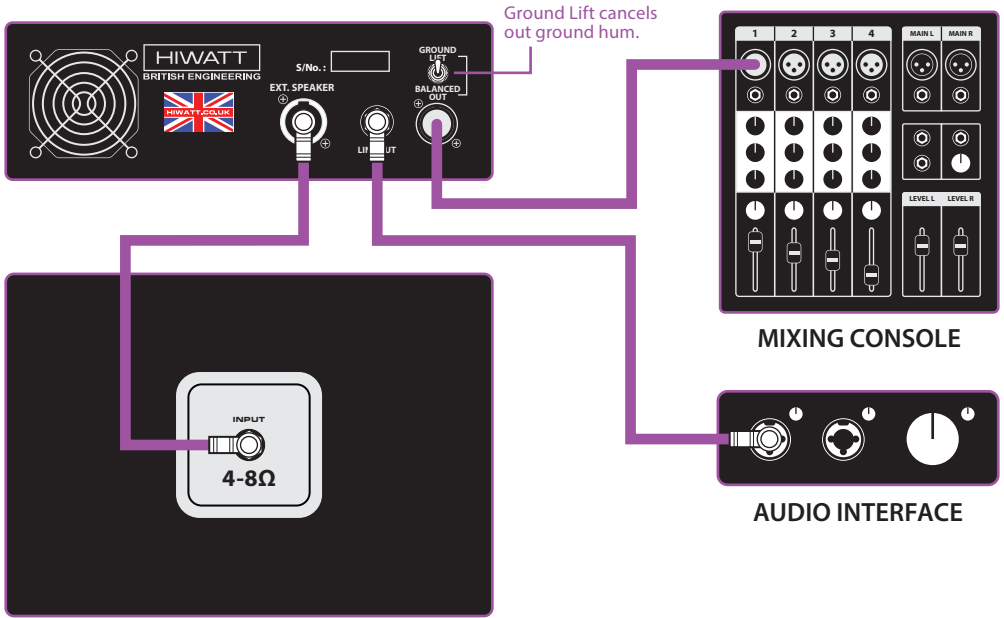

## CONNECTING A SECOND SPEAKER CABINET

 TWO 8Ω SPEAKER CABINETS IN PARALLEL USING ONE SPEAKER OUTPUT AND A CABINET WITH A PARALLEL 'LINK' OUTPUT

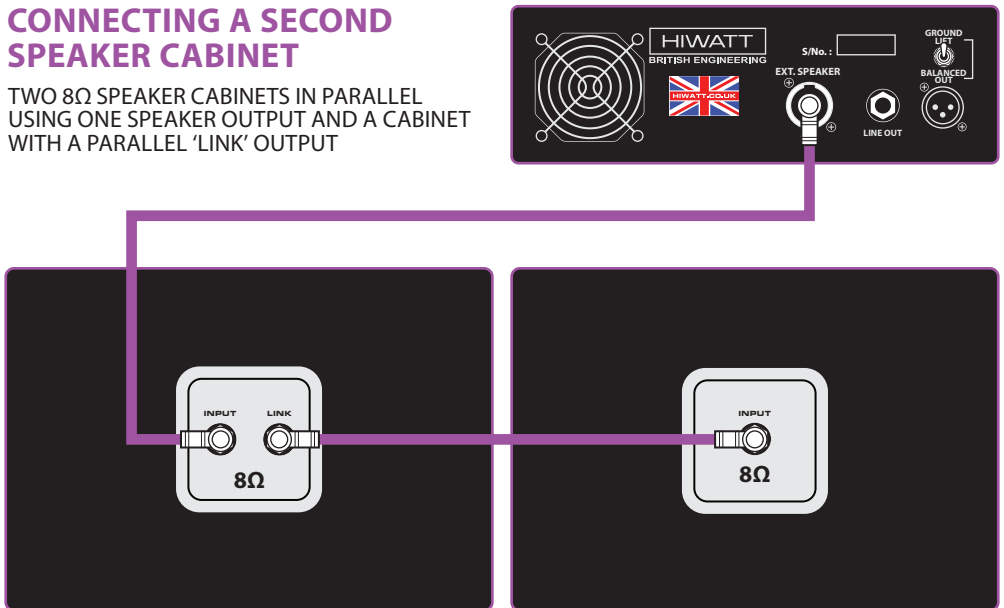




## CONNECTING SPEAKER CABINETS CONTINUED

The Bulldog 77 boasts Hiwatt's classic analog preamp, clean transformer-based power section and a fantastic transistor-based output section. Used extensively in the studio and on the stage, loved for it's high portability and old school player feel.

The bulldog 300 maintains the same classic analog preamp and transformer-based power section as the Bulldog 77 but also features a Class D output section which produces more power and in turn, more volume.

Due to the linear nature of Class D amplification, running the Bulldog 300 into a 4 ohm load will result in double the volume and power output from the amplifier. Ensure that your speaker load is sufficient enough to handle this level of power. Below is the minimum rating for running the Bulldog 300 at 8Ω and 4Ω respectively.
   
### BULLDOG 300 500w at 8Ω /1000w at 4Ω

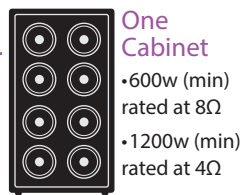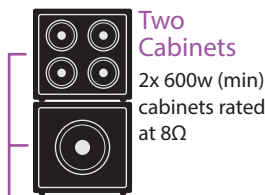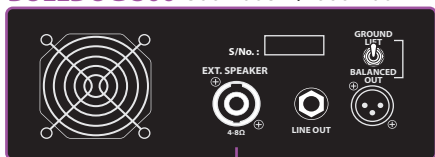

## GETTING CREATIVE WITH TONES

 
### Mid Scooped Overdrive

- GAIN** - Set to 3 o'clock.
- BASS** - Boost Bass to desired level.
- LOW MID** - Cut Low Mids.
- HIGH MID** - Cut High Mids.
- TREBLE** - Boost Treble to desired level.
- VOLUME** - Boost Volume until speaker breaks up




### Slap Bass With Limiter

- GAIN** - Use Gain to set Limiter threshold.
- BASS** - Boost Bass to desired level.
- LOW MID** - Cut Low Mids.
- HIGH MID** - Cut High Mids.
- TREBLE** - Boost Treble for defined plucks.
- VOLUME** - Set Volume to desired level.

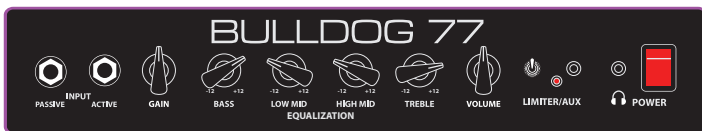


### Eggy Clean

 - GAIN** - Set to edge of breakup.
- BASS** - Bass set to Noon.
- LOW MID** - Set Low Mids to Noon.
- HIGH MID** - Cut High Mids.
- TREBLE** - Boost Treble to desired level.
- VOLUME** - Boost Volume to desired level.

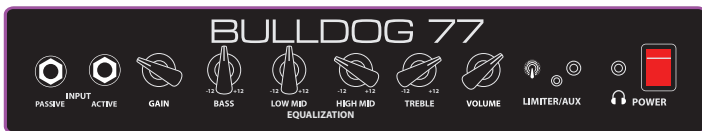

### Vintage Thump

 - GAIN** - Set to 1 o'clock.
- BASS** - Boost Bass to desired level.
- LOW MID** - Boost Low Mids.
- HIGH MID** - Cut High Mids.
- TREBLE** - Cut Treble to desired level.
- VOLUME** - Set Volume to desired level.

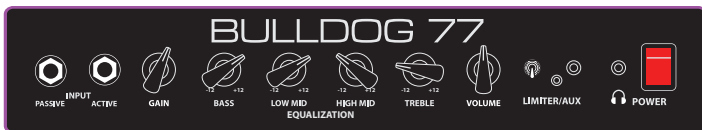

# HIWATT



## BRITISH ENGINEERING

- Hiwatt amplifiers are warranted against defects in materials and workmanship for a period of 1 year.
- Speakers, transformers, reverb tank, batteries, and tubes/valves for 90 days.
- Please note: It is your responsibility to use the equipment safely and properly, without modifications, within specifications and with a safe power supply.
- Please note: The limited Warranty provided is non-transferable. (please register your product online and retain sales receipt and original packaging) and authorization needs to be obtained by Hiwatt Electronics (Hiwatt.co.uk) before any service work is completed by a professionally qualified Service Technician.
- Shipping costs incurred obtaining warranty service are the responsibility of the purchaser, and the purchaser must obtain permission to ship any/all product prior to shipping.
- Please note: Any damages incurred in shipping must be reported to the shipper and Hiwatt Electronics immediately upon receiving the product.

### Follow all instructions and warnings

Please keep instructions in a safe place

Register product online: **Hiwatt.co.uk**

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Store Contact Info: \_\_\_\_\_



RECYCLING INFO 

**Hiwatt Electronics Limited**

Unit 3, Plumb Units, Sandall Stones Road  
Kirk Sandall, Doncaster  
DN3 1QR

SALES@HIWATT.CO.UK



 REGISTER PRODUCTS